






3. When the confirmation has been sent that the printer is in “Board Manager Mode”, retrieve the MPI file from the printer:

See “individual code receive”.

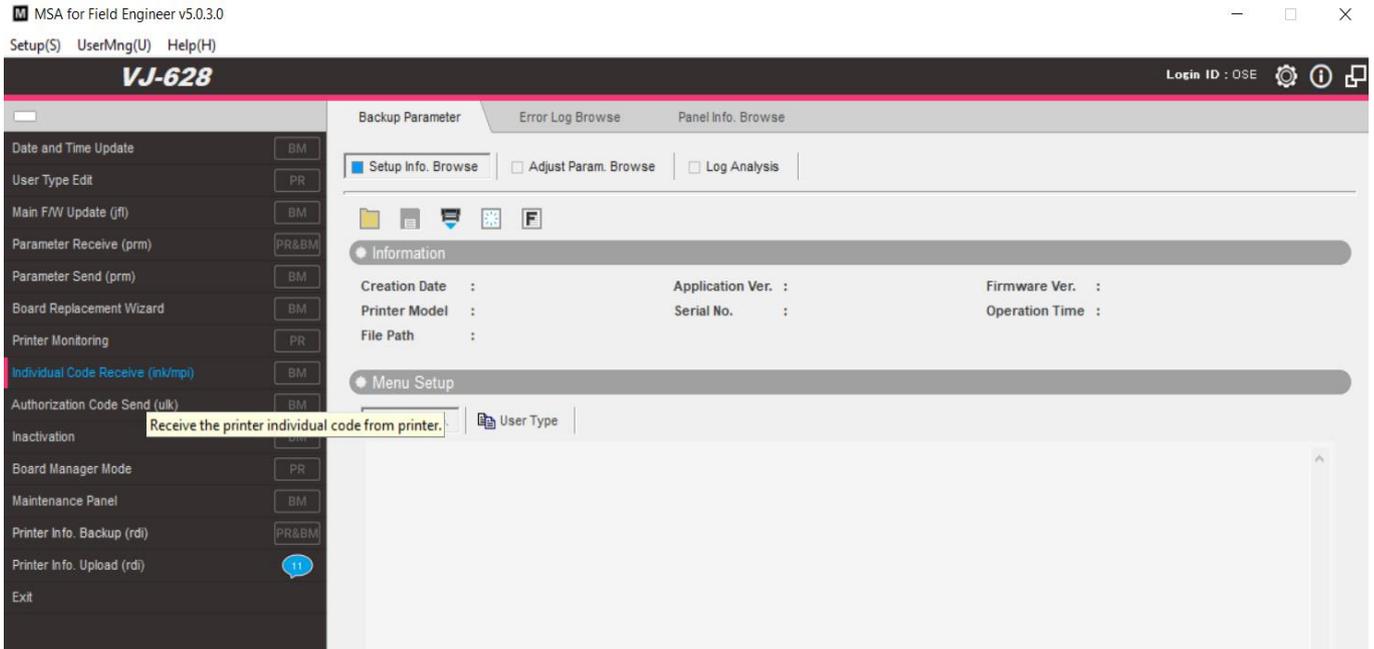

4. Send this file to MUTOH Europe.
5. MUTOH Europe will generate a ULK file.



**wide format printers  
for productive people**


[www.mutoh.eu](http://www.mutoh.eu)

**Mutoh Europe nv**  
EMEA Headquarters

Archimedesstraat 13 - 8400 Oostende - Belgium  
T. +32 (0) 59 56 14 00 - F. +32 (0) 59 80 71 17  
BTW BE 0441 745 423 - RPR Oostende

6. Upload this file via “authorization code sent”

⇒ wait while the data is sent until you receive the confirmation that the printer is ready

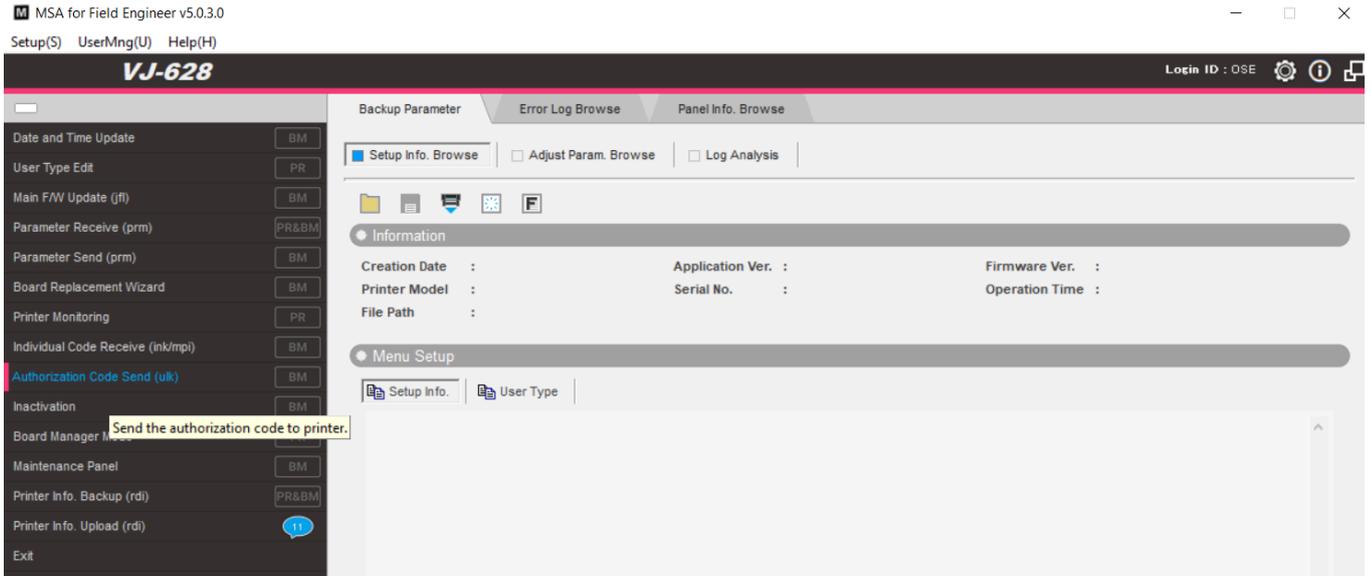

To return to normal user mode instead of Board manager mode: Power off the printer and power on again by just pushing the power button.