



## Installation Procedure for VJ-626UF External Waste Ink Tank


Move the table to the back as far as it will go.

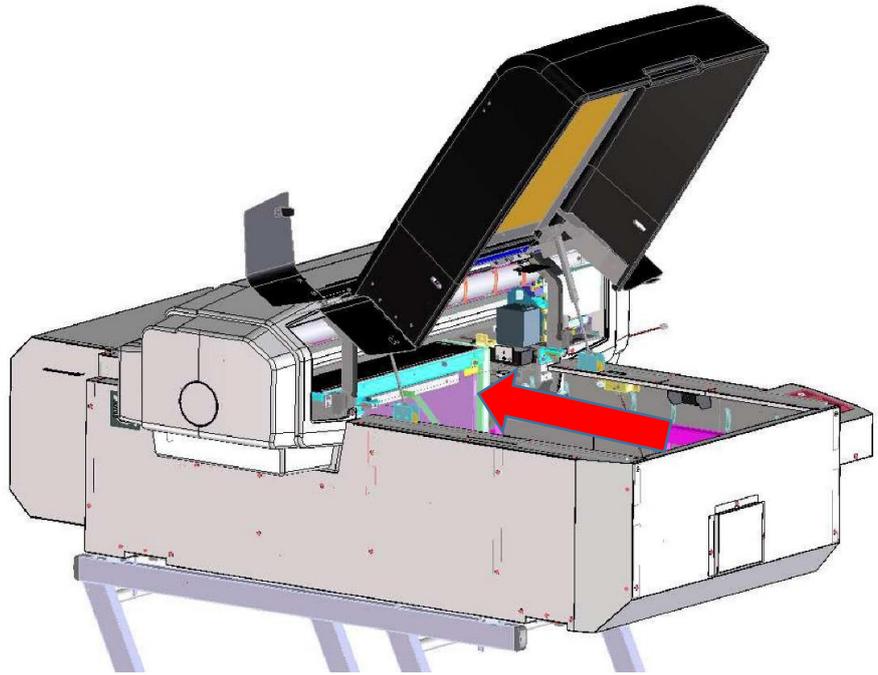




Remove the side cover R, then remove the waste ink tank holder and the waste ink tank.

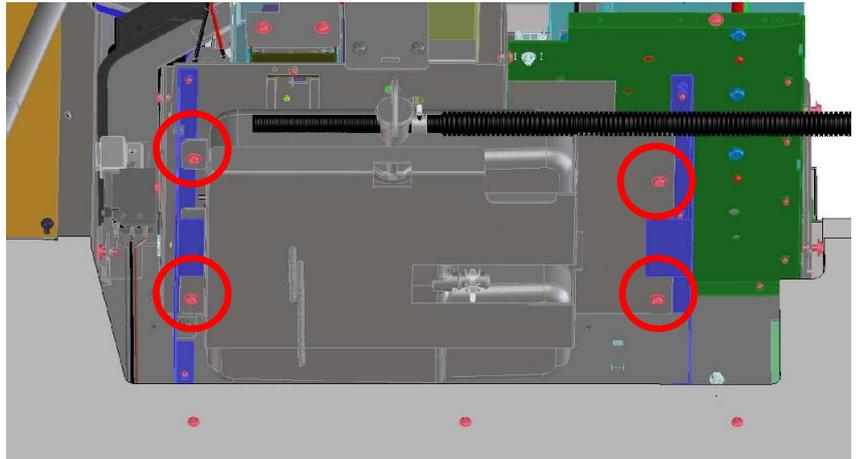



Connect the fluorine rubber tube to the flushing box and secure with the hose band.

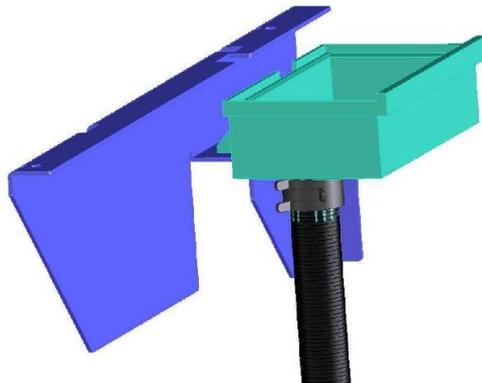


Remove the maintenance base stay, then attach the new maintenance base stay (with flushing box) supplied with the replacement kit to the printer.

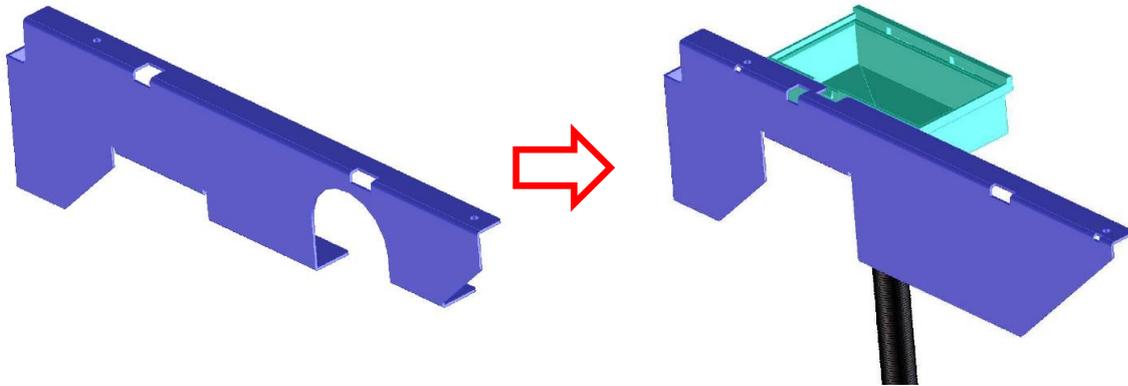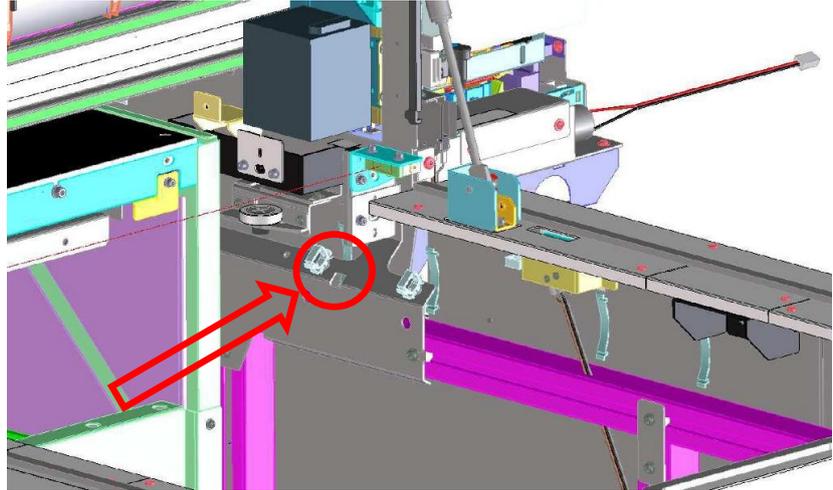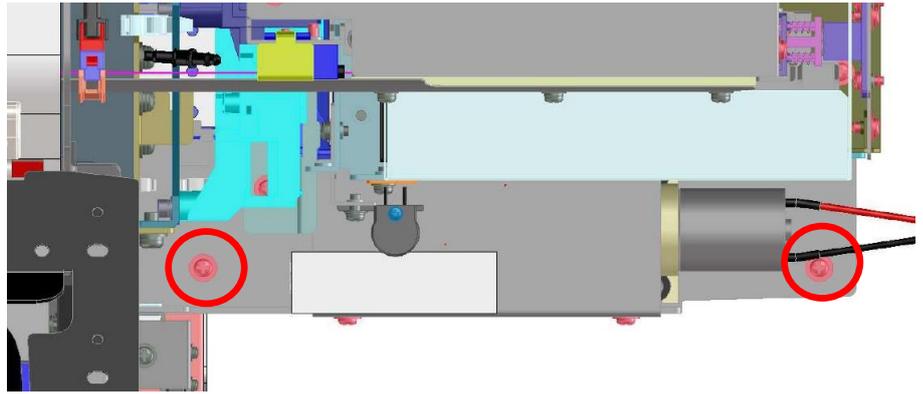


Remove two lower screws securing the stay. Attach the shielding plate to the stay and secure with the two screws.

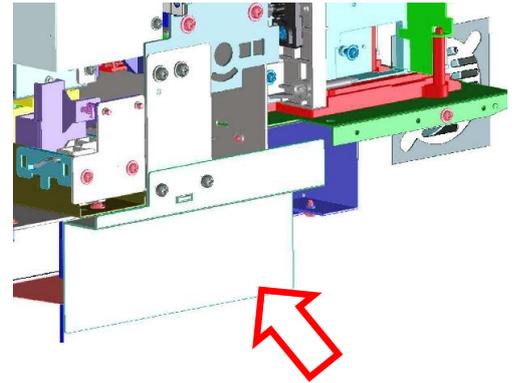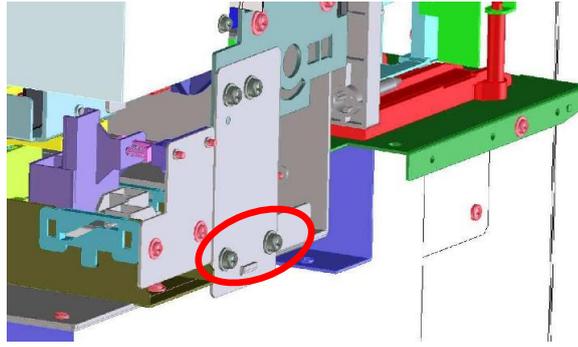


Secure the waste ink tank holder to the holder fixing plate with screws and put an absorbent pad on the waste ink tank holder.

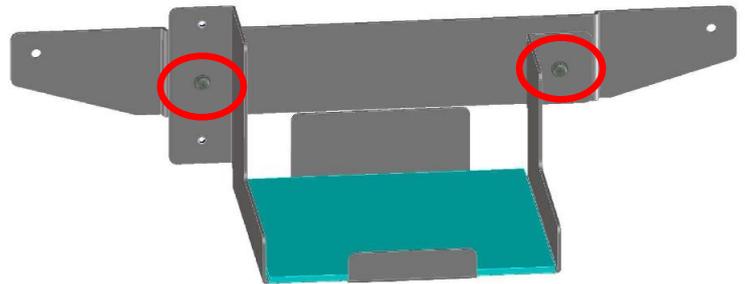


Fold along the fold lines to assemble the light blocking cover.

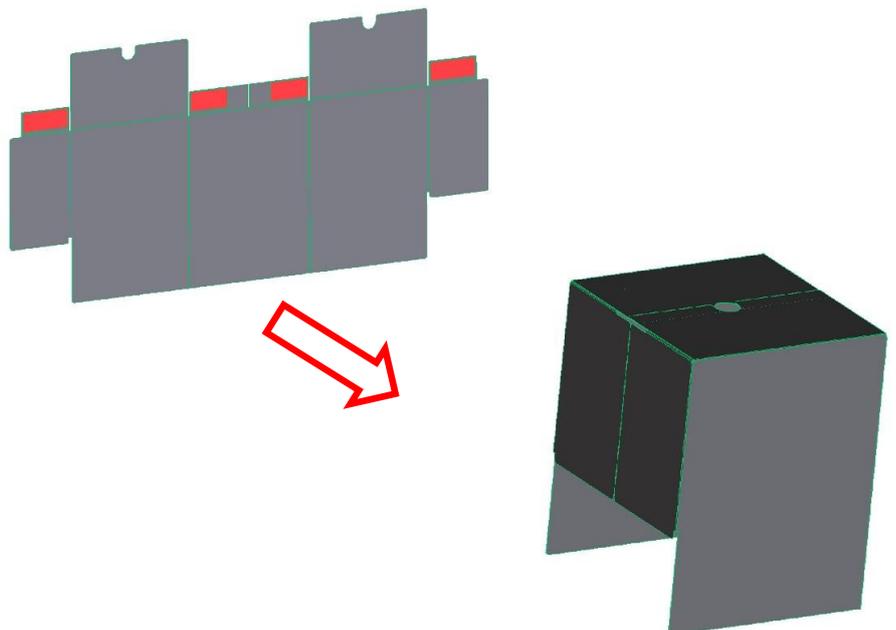


Remove two screws from the **side Cover** and secure the holder fixing plate to the side frame with the screws.  
Put the waste ink tank on the waste ink tank holder.

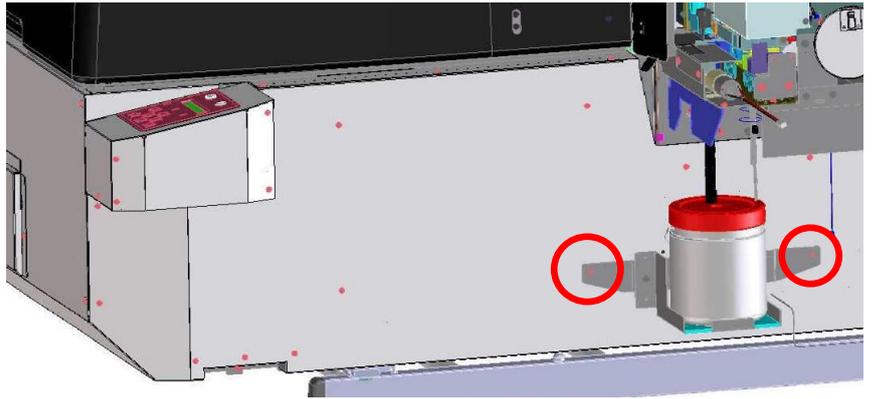


Cover the waste ink tank with the light blocking cover.

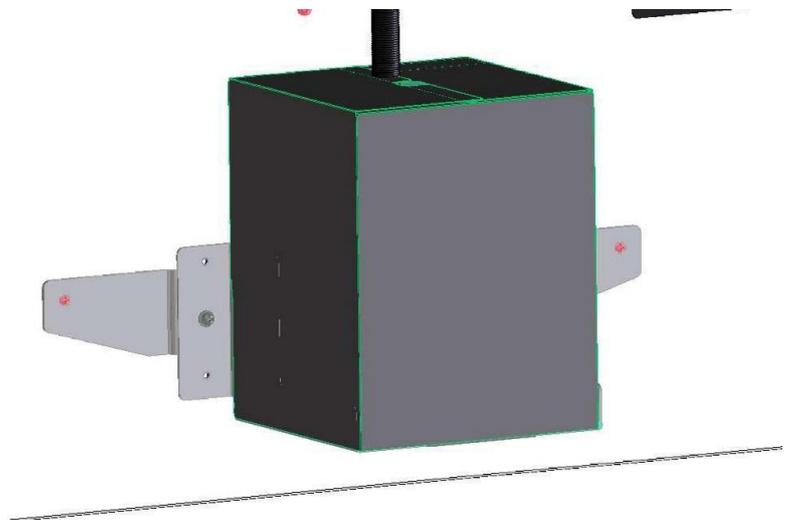

Pass the fluorine rubber tube through the hole on the side cover R and attach the side cover R to the side frame.

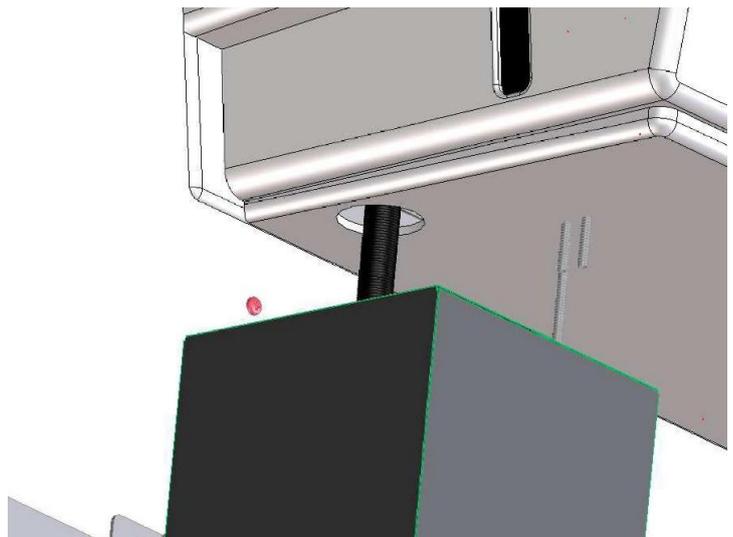

Use the laser sensor adjustment jig to adjust the height of the laser sensor.

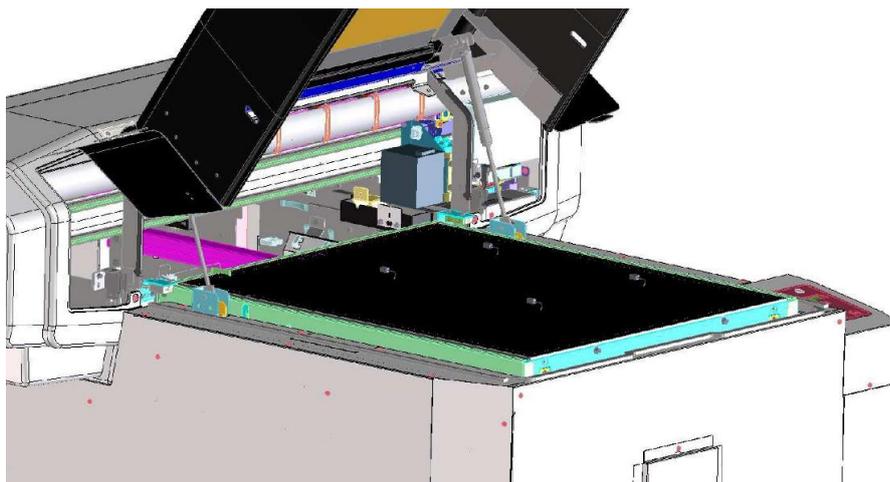

Reset the waste ink counter.